

# Lawn speaker

Installation Manual





### 1. Summary

(1)Lawn speaker, it is a high-quality waterproof garden stone shaped glass steel enclosure speaker, coaxial speaker design, The sound quality is full and moving, suitable for a variety of scenic areas, leisure occasions.


(2)Lawn speaker can be connected to 100V line output directly. The jumper joint of its 100V transformer primary winding can be used for power settings. The user can choose the power.

# 2. Specifications

		1
Electric	Speaker Unit	6.5 "coaxial PP basin
	Maximum Power	45W
	Rated Power(PHC)	30W
	Sensitivity (1 kHz, 1 meter)	95dB±3 dB
	Effective frequency range(-10dB)	120-16kHz
	Rated Voltage	100V
	Input Interface	3-core cable
	Connection Terminal Color	Black, White, Green
Product	Dimension	330(L)×250(W)×270 (H)mm
	Weight	5kg
	Package Dimension(1Pcs)	410 (L)×350 (W)×325 (H)mm
	Package Weight	6kg
	Installation method	Screw holder
Material		Marbled glass fiber reinforced plastic
	Shell	or earth yellow glass fiber reinforced
		plastic
Environment	Operating Temperature	-25°C~+55°C
	Storage Humidity	-40℃~+70℃
	Relative Humidity	< 95%
	•	



# 3. Electric Schematic Diagram

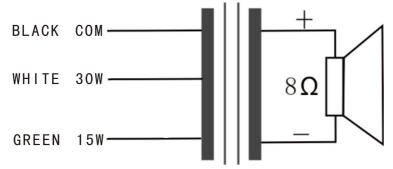

### Wiring Instructions:


Connect the power amplifier output COM to the black line, and connect the power amplifier 100V output to the required cable.

#### For Example:

If the rated power is 30W, the power amplifier COM is connected to the black line, and the power amplifier 100V is connected to the white line.

If the rated power is 15W, the power amplifier COM is connected to the black line, and the power amplifier 100V is connected to the green line.

#### 4.Installation Instruction

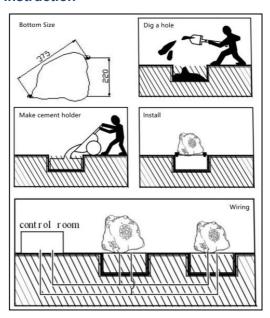

#### 5. Troubleshooting

Fault Phenomenon	Causes Of Faults And Troubleshooting
Small sound, no sound.	You can check that the wiring is correct and firm and there is no short circuit (in addition, there should be a certain margin in the wiring to avoid damaging the internal wiring of the lawn speaker)
Poor sound quality, noisy	You can check the input signal source of the power amplifier and the sound transmission connector of the input wire is selected correctly. In addition, the lawn speakers should be firmly fixed. If they are not firmly fixed, they may vibrate, resulting in poor sound quality.

## 6. Packing List

- (1) Quick Installation Guide 1 pcs
- (2) Lawn Speaker 1 pcs
- (3) Certification 1pcs
- (4) Iron Sheets (already assembled on the bottom case) 2 pcs
- (5) M6X12 countersunk head stainless steel screws (already assembled on the bottom shell) 2 pcs
- (6) M6 washers (already assembled on the bottom case) 2 pcs



